



# Nook Folding Play Gym

Safety standard : EN 71-1:2014+A1:2018  
EN 71-2:2020  
EN 71-3:2019+AT:2021



**Against The Grain Childrens Furniture LTD**  
3/16 Gateway Park Drive, Pokeno, WKO, 2402,  
New Zealand

**support@againstthegrain.nz**  
**www.againstthegrain.nz**

# Instruction Manual

## General Guidelines

- This product is designed for indoor use only.
- Place the play gym on a flat, stable surface before use.
- Ensure all components are correctly assembled and secure before allowing use.
- Only use the play gym with the components supplied.

## Safety Instructions

- **Adult supervision required at all times. Never leave a baby unattended while using the play gym.**
- **Use only on a flat, stable surface.**
- **Do not allow older children to climb, hang, or pull on the frame.**
- **Discontinue use once your baby can sit upright, push up on hands and knees, or reach the toys, whichever occurs first.**
- **Regularly inspect all parts. Discontinue use immediately if any damage, cracks, or looseness is observed.**
- **Keep hanging toys securely attached. Do not add additional toys or cords.**
- **This product is not a climbing or weight-bearing structure.**

## Care Instructions

### Play Mat

- Machine wash on a gentle cycle or hand wash.
- Air dry only. Do not tumble dry.
- Do not bleach or dry clean.


### Wooden Frame

- Wipe clean with a soft, damp cloth.
- Dry immediately after cleaning.
- Do not soak or submerge in water.
- Avoid harsh cleaners or chemicals.

### Hanging Toys

- Spot clean with a damp cloth.
- Do not soak.

## Contents

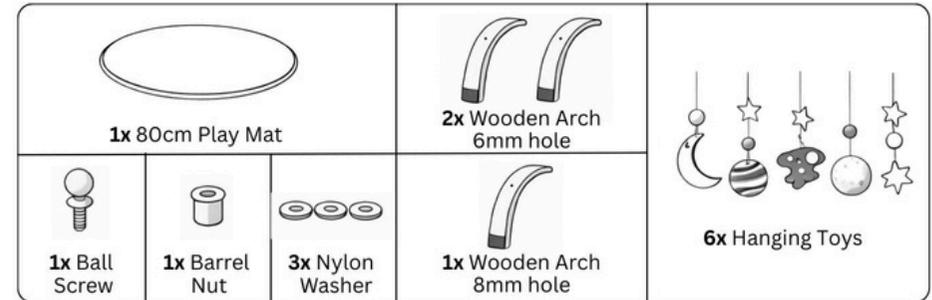

## Assembly Instructions

### WARNING

Adult assembly required.  
Assemble away from children.  
Contains small parts.

Always assemble and set up the play gym away from heat sources (e.g. heaters, fireplaces, direct heat vents).

