



Rainbow Rocking Arch




Against The Grain Childrens Furniture LTD
3/16 Gateway Park Drive, Pokeno, WKO, 2402,
New Zealand
support@againstthegrain.nz
www.againstthegrain.nz

Instruction Manual

Contents




Arch Frame 2 pcs

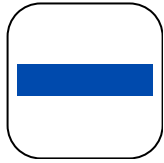

Rainbow Plank 9 pcs



Hex Key 1 pcs

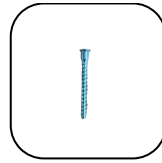

Hex Screw 8 pcs

Usage Instructions

Rocking Mode: Place the arch on a flat surface with the curved side down. Children can sit or lie on the arch, using it as a rocker.

Climbing Mode: Flip the arch over so the curved side faces upwards. It can be used as a climbing frame for active play.

Imagination Mode: The Rainbow Rocking Arch can also serve as a tunnel, bridge, or balance board—encouraging endless creative play.

Safety Instructions

- Recommended for children ages 1+.
- Adult supervision is required at all times.
- Ensure the arch is used on a flat, non-slippery surface.
- **Do not exceed the weight limit of 40kg.**
- Check the arch regularly for any loose parts or damage before use.

Care Instructions

- Wipe with a damp cloth to clean.
- Avoid using harsh chemicals.
- Store indoors, away from moisture and direct sunlight.


Assembly Instructions

Step 1 : Identify all parts

Make sure you have all the components listed in the contents section. Place everything on a soft surface to prevent any damage during assembly.

Step 2: Insert planks

Align the pre-drilled planks with the allocated slots in the frame. Gently slide the planks into place.

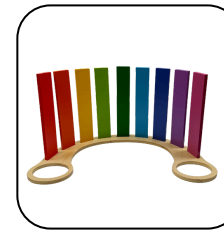

Step 3: Insert screws

Once the planks are in position, insert the screws into the pre-drilled holes. Tighten using the Allen key, but be careful not to overtighten to avoid damaging the wood.



Step 4: Double-check assembly

Ensure that all screws are secure, the planks are properly slotted, and the arch is stable before use.